


IDLE SPEED

(Refer to the maintenance precautions on page 52).

Idle Speed:

NOTE:

- * The engine must be at normal operating temperature for accurate idle adjustment.

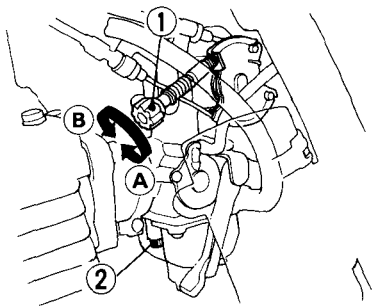

- (1) Throttle stop screw (A) Increase rpm
(2) Pilot screw (B) Decrease rpm

1. Warm up the engine and hold the motorcycle upright. Shift to neutral.
2. Adjust the idle speed with the throttle stop screw (1).

IDLE SPEED:

1,300 ± 100 min⁻¹ (rpm) (In neutral)

Idle Mixture:

1. Turn the pilot screw (2) clockwise until the engine misses or decreases in speed, then counterclockwise until the engine again misses or decreases in speed. Set the screw exactly between these two extreme positions to adjust the fuel mixture. Usually the correct setting will be found to be 2-1/4 turns open from the fully closed position.
2. If the idle speed changes after adjusting fuel mixture, readjust the idle speed by turning the throttle stop screw.