

## ENGINE OIL

### Engine Oil Level Check

Check the engine oil level each day before riding the motorcycle.

The oil filler cap is in front of fuel tank and has a dipstick for measuring the oil level. Oil level must be maintained between the upper (1) and lower (2) level marks on the dipstick (3).

#### NOTE:

- \* The oil level cannot be checked accurately immediately after the engine has been run at high speed.
- \* Make sure that motorcycle is standing upright on firm level ground while idling.


1. Park the motorcycle on a firm, level surface.
2. Start the engine and let it idle for 5 minutes. If the air temperature is below 10°C (50°F), let the engine idle for an additional 5 minutes (a total of 10 minutes).

An engine that is not warmed sufficiently may give an inaccurate (low) oil level

reading. During idling, support the motorcycle in an upright position to assure an accurate oil level reading. Stop the engine.

3. Immediately remove the oil filler cap/dipstick (3) and wipe it clean.
4. Hold the motorcycle upright. Insert the dipstick until it seats, but don't screw it in.
5. Remove the dipstick. The oil level should be between the upper (1) and lower (2) level marks on the dipstick.

If required, add the specified oil (see page 62) up to the upper level mark. Do not overfill.

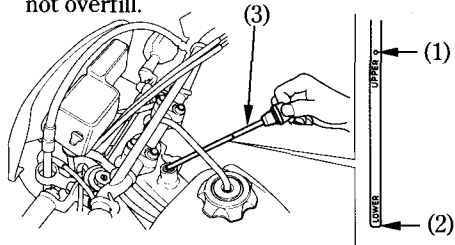

- (1) Upper level mark      (3) Oil filler cap/dipstick  
(2) Lower level mark