



Air Cleaner

Cleaning

LEFT SIDE

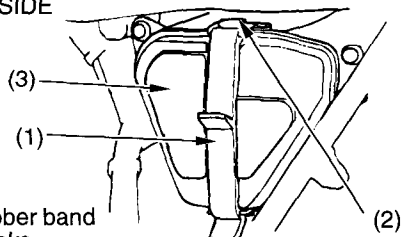

- (1) rubber band
- (2) hooks
- (3) air cleaner housing cover

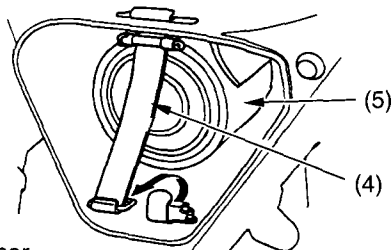

- (4) retainer
- (5) air cleaner

1. Remove the left side cover (page 57).
2. Remove the rubber band (1) from the hooks (2) and remove the air cleaner housing cover (3).
3. Unhook the retainer (4) and remove the air cleaner assembly (5).
4. Remove the air cleaner from its support. Wipe the support clean.
5. Gently wash the air cleaner in clean, non-flammable (high flash point) solvent such as kerosene — not gasoline. After cleaning, gently squeeze out the remaining solvent. Avoid twisting or wringing the air cleaner. This can tear the foam.
6. Inspect for tears or cracks in the foam or seams of the air cleaner. Replace the air cleaner if it is damaged.
7. Allow the air cleaner to **dry thoroughly** before applying oil. A wet air cleaner will not fully absorb the oil.