

4. Tighten the axle nut to specified torque.  
Axle nut torque:  
93 N·m (9.5 kgf·m , 69 lbf·ft)
5. Recheck chain slack.

**▲WARNING**

**\* If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly.**

**CAUTION:**

**\* Damage to the bottom part of the frame may be caused by excessive drive chain slack of more than:  
60 mm (2.4 in)**