

**Clock setting:**

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold A-button and B-button until the hour digits start flashing.



- 3 Press A-button until the desired hour is displayed.
  - ▶ Press and hold to advance the hour fast.



- 4 Press B-button. The minute digits start flashing.



- 5 Press A-button until the desired minute is displayed.
  - ▶ Press and hold to advance the minute fast.



- 6 Press B-button. The clock is set, and the display moves to changing of the fuel mileage unit.