


Front/Rear Turn Signal Bulb

1. Remove the screw.
2. Turn the turn signal lens counterclockwise and remove it.
3. Slightly press the bulb and turn it counterclockwise.

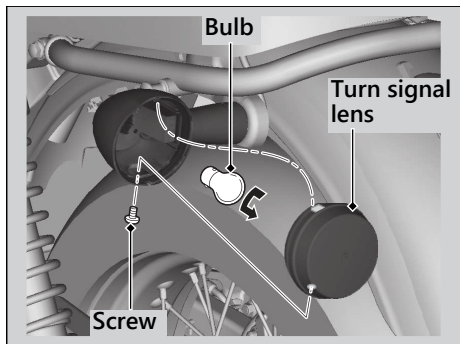

4. Install a new bulb and parts in the reverse order of removal.