


Display Setting

You can adjust the two settings.

- Clock setting
- Changing of mileage unit

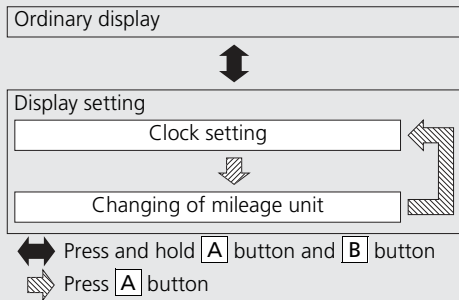

To set the clock:

- 1 Turn the ignition switch on.
- 2 Press and hold [A] and [B] buttons until the hour digits start flashing.

AM 10:25 → AM 10:25

- 3 Press [B] button until the desired hour and AM/PM are displayed.
 - ▶ Press and hold to advance the hour fast.

AM 10:25 → PM 5:25

- 4 Press [A] button. The minute digits start flashing.

PM 5:25 → PM 5:25