

## Changing/Cleaning Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

### NOTICE

Using the wrong air cleaner element can result in serious damage to the engine.

1. Remove the right side cover. [▶ P. 54](#)
2. Remove the attaching screws and air cleaner housing cover.
3. Pull out the air cleaner element and check it for any damage.
  - ▶ Blow away the remaining dust by applying compressed air from the outside of the air cleaner element.
  - ▶ Replace the air cleaner element if it is excessively dirty, torn or damaged.

