
## **Load Limits & Guidelines**

## **Luggage Tie-Down Straps**

REAR

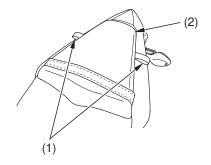

- (1) luggage tie-down straps
- (2) rear seat

Your motorcycle is equipped with retractable luggage tie-down straps (1) on the underside of the rear seat (2). To use the straps, remove the rear seat (page 94) and pull the straps outward.

Never use the tie-down straps to tow or lift your motorcycle.