Throttle Inspection

Refer to Safety Precautions on page 78.

- Check that the throttle assembly is positioned properly and the securing bolts are tight.
- 2. Check for smooth rotation of the throttle from fully open to fully closed in all steering positions. If there is a problem, see your dealer.