

- 3 Press **SET** button. The REV indicator lighting RPM is set, and the display moves to the setting of REV indicator lighting interval RPM.

At the same time, the blinking bar segment shows the current settings of the REV indicator lighting RPM and the numerical tachometer display shows the current REV indicator lighting interval RPM.

- 4 Each time **SEL** button is pressed, the numbers of the REV indicator lighting interval RPM advances in this order: 0 r/min (rpm), 250 r/min (rpm), and 500 r/min (rpm).

