

## Instruments *(Continued)*

### ▮ Odometer [TOTAL]

Total distance ridden.

When "-----" is displayed, go to your dealer for service.

### ▮ Tripmeter [TRIP A/B]

Distance ridden since tripmeter was reset.

When "-----." is displayed, go to your dealer for service.

**To reset the tripmeter:**  **P.27**

### ▮ Numerical tachometer

Displays the engine revolutions per minutes digit.

Display range: 0 to 15,000 r/min

- More than 15,000 r/min: "15,000" is displayed.

### ▮ Reserve tripmeter [RES]

Distance ridden since the 1st (E) segment of the fuel gauge starts flashing.

When the 1st (E) segment of the fuel gauge starts flashing, the odometer, tripmeters or numerical tachometer switches to the reserve tripmeter. You should refill the tank as soon as possible.

When "----.-" is displayed, go to your dealer for service.

After refueling more than the reserve amount, the display returns to normal.