## **Instruments** (Continued)

- 3 Press **SEL** button until the desired minute is displayed.
  - Press and hold **SEL** button to advance the minute quickly.



4 Press **SET** button. The clock is set, and then the display moves to the backlight brightness adjustment.

## 3 Backlight brightness adjustment:

You can adjust the brightness to one of five levels.

- 1 Press **SEL** button. The brightness level is switched.
  - You can adjust the brightness level from five levels.



2 Press SET button. The backlight is set, and then the display moves to the activating/ deactivating of tripmeter A, average fuel mileage, fuel consumption, average speed and elapsed time automatic reset mode.