

Instruments *(Continued)*

6 Changing the fuel mileage meter unit:

- ① Press **SEL** button to select "L/100km" or "km/L".



- ② Press **SET** button. The fuel mileage meter unit is set, and then the display moves to the ordinary display.