



Tachometer

NOTICE

Do not operate the engine in the tachometer red zone. Excessive engine speed can adversely affect engine life.

Speedometer

 


Clock (12-hour display)

To set the clock: ➡ P.25

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing: approximately 1.06 US gal (4.0 L)



At the same time, the display switches to the reserve fuel consumption. ➡ P.23

If the fuel gauge indicator flashes in a repeat pattern or turns off: ➡ P.88