

High Coolant Temperature Indicator and Warning Indicator


The high coolant temperature indicator (1) and the warning indicator (2) light when the coolant temperature reaches 251°F (122°C). At the same time, the numbers in the coolant temperature meter display start flashing.

If this occurs, stop the engine and check the reserve tank coolant level. Read pages 125 — 128 and do not ride the motorcycle until the problem has been corrected.

NOTICE

Continuing to ride with an overheated engine can cause serious engine damage.

The high coolant temperature indicator should also go on for a few seconds and then go off when the ignition switch is turned ON.

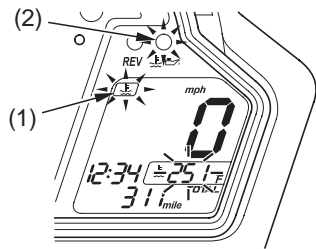

- (1) high coolant temperature indicator
- (2) warning indicator