



Multi-information display ➔ P.25

Gear position indicator

Shows 1st to 6th gear positions. “-” appears when the transmission is not shifted properly.

Quick Shifter indicator

Displays the current status of the Quick Shifter.

QS OFF : Quick Shifter system is disabled.

QS ▲ ON : Quick Shifter upshifting is enabled.

QS ▼ ON : Quick Shifter downshifting is enabled.

QS ⬆ ON : Quick Shifter upshifting and downshifting are both enabled.

QUICK SHIFTER: ➔ P.45 ➔ P.46

➔ P.110