

GENERAL


To Set the GENERAL Menu

- 1 Select the "GENERAL" on the main menu screen. **➡ P.43**
- 2 Select a menu by pressing the **SEL ▲** (up) or **SEL ▼** (down) button and press the **MODE** button.

To End the Setting

Select the **◀** (return) menu on the menu screen. The display returns to the "GENERAL" on the main menu screen.

"GENERAL" is selected

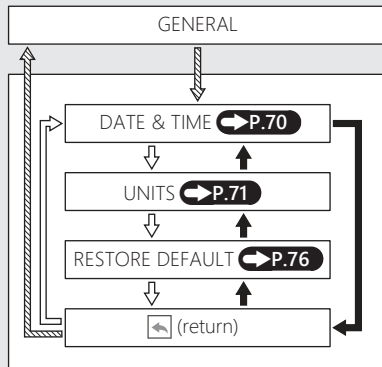

➡ Press the **MODE** button

➡ Press the **SEL ▲** (up) button

➡ Press the **SEL ▼** (up) button