

Fuel Mileage Meter Unit [FUEL CONS.]

- 1 When the "mph" of the "SPEED" menu is selected

Select the "MPG" or "mile/L" using the **SEL** **▲** (up) or **SEL** **▼** (down) button.

When the "km/h" of the "SPEED" menu is selected

Select the "L/100 km" or "km/L" using the **SEL** **▲** (up) or **SEL** **▼** (down) button.

- 2 Press the **MODE** button. The fuel mileage meter unit setting is set, and then the display returns to the upper level hierarchy.



When selecting the "MPG"

- Units of the current fuel mileage and average fuel mileage show "MPG".
- Units of the tripmeter A fuel consumption and amount of remaining fuel show "GAL".

When selecting the "mile/L"

- Units of the current fuel mileage and average fuel mileage show "mile/L".
- Units of the tripmeter A fuel consumption and amount of remaining fuel show "L".