



Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

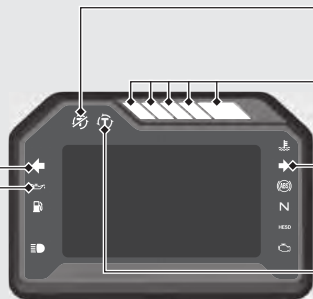

Low oil pressure indicator

Comes on when the ignition switch is turned to the ON position. Goes off when the engine starts.

If it comes on while engine is running:  **P.181**

 **Left turn signal indicator**

Torque Control OFF indicator

Comes on when the Torque Control is turned off.

Shift indicators **P.96**

Comes on briefly when the ignition switch is turned to the ON position.

Right turn signal indicator

Torque Control indicator

- Comes on when the ignition switch is turned to the ON position. Goes off when your speed reaches approximately 3 mph (5 km/h) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

If it comes on while riding:  **P.183**