

Indicators *(Continued)*

Shift Indicators

The shift indicators light or blink by the engine revolutions. The first indicator lights when the engine revolutions reach a number 800 r/min (rpm) below a preset revolution number.

The second, third and fourth indicators will light each time the engine revolutions is 200 r/min (rpm) rise.

All indicators will blink when engine revolutions is reached the set value.

Setting of the Shift Indicators







You can change the engine revolutions at which the shift indicators start blinking.

Initial setting: OFF

Available setting range:

4,000 to 16,600 r/min (rpm)

Example Set value: 11,600 r/min (rpm)

	0 to 10,800 r/min (rpm) All indicators go off
	10,800 r/min (rpm) First indicator comes on
	11,000 r/min (rpm) Second indicator comes on
	11,200 r/min (rpm) Third indicator comes on
	11,400 r/min (rpm) Fourth indicator comes on
	11,600 r/min (rpm) All indicators blink