

Ignition Switch

Switches the electrical system on/off, locks the steering.

- u Key can be removed when in the OFF or LOCK position.


ON
Turns electrical system on for starting/riding.


OFF
Turns engine off.

LOCK
Locks steering.



Engine stop switch/ Start button

Should normally remain in the  (Run) position.

- u In an emergency, switch to the  (Off) position to stop the engine.