

Removal

Make sure the ignition switch is in the OFF position.

1. Remove the front seat. **2** P. 139
2. Unhook the rubber strap from left side.
3. Disconnect the negative - terminal from the battery.
4. Disconnect the positive + terminal from the battery.
5. Remove the battery taking care not to drop the terminal nuts.

Installation

Install the parts in the reverse order of removal.

Always connect the positive + terminal first.

Make sure that bolts and nuts are tight.

Make sure the clock information is correct

after the battery is reconnected. **2** P. 70

For proper handling of the battery, see

"Maintenance Fundamentals." **2** P. 123

"Battery Goes Dead." **2** P. 193