

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 179	Burned-out Light Bulb .....	P. 194
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 180	Blown Fuse .....	P. 197
<b>Warning Indicators On or Flashing</b> .....	P. 181		
Low Oil Pressure Indicator .....	P. 181		
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 181		
ABS (Anti-lock Brake System) Indicator .....	P. 182		
HESD (Honda Electronic Steering Damper)			
Indicator .....	P. 182		
Torque Control Indicator.....	P. 183		
<b>Tire Puncture</b> .....	P. 184		
<b>Electrical Trouble</b> .....	P. 193		
Battery Goes Dead.....	P. 193		