

Instruments *(Continued)*

4 Changing of speed and mileage unit:

- a Press **SEL** button to select either “mph” and “mile” and “mile” or “km/h” and “km”.



When selecting the “mph” and “mile”.

- Fuel mileage unit shows “mile/gal”.
- Fuel consumption unit shows “gal”.

When selecting the “km/h” and “km”.

- Fuel mileage unit shows “km/L” or “L/100km”.
- Fuel consumption unit shows “L”.

- b **When selecting the “mph” and “mile”.**
To end the selection, press **SET** button.

The established setting can also be set by turning the ignition switch to OFF.

The control is automatically switched from the setting mode to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.

- When selecting the “km/h” and “km”.**
Press **SET** button. The speed and mileage unit is set, and then the display moves to the changing of the fuel mileage meter unit.