


## Position Light

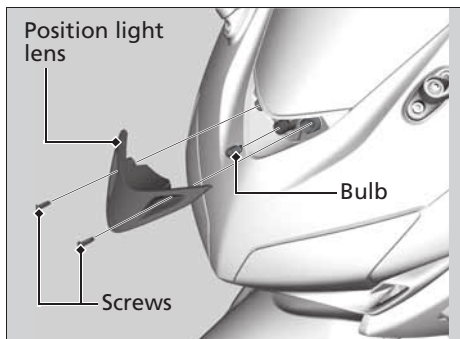

1. Remove the screws.
2. Remove the position light lens.
3. Pull out the bulb without turning.
4. Install a new bulb and reinstall the parts in the reverse order of removal.