


Instruments (Continued)

Torque Control level (P53)

S indicator

CRF1000D

Comes on when the S mode is selected in the AT MODE.
(P65)

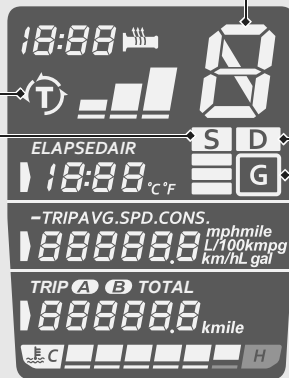

D indicator

CRF1000D

Comes on when the D mode is selected in the AT MODE.
(P65)

G indicator

CRF1000D

Comes on when the G switch is turned on. (P56)