

## Indicators *(Continued)*



### Torque Control OFF indicator

- Comes on when the Torque Control is turned off.



### Torque Control indicator

- Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 6 mph (10 km/h) to indicate Torque Control is ready to work.
- Blinks when Torque Control is operating.

**If it comes on while riding:** ( P140)

