


Cleaning the Crankcase Breather


1. Place a suitable container under the crankcase breather tube.
2. Remove the crankcase breather tube plugs from the tube.
3. Drain deposits into a suitable container.
4. Install the crankcase breather tube plugs.

Left

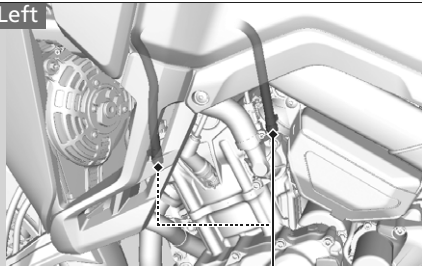

Crankcase breather tube plugs

Right

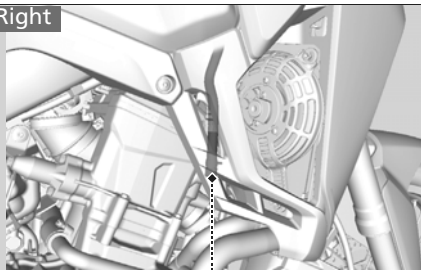

Crankcase breather tube plug