


## ABS Main Fuse

CRF1000A

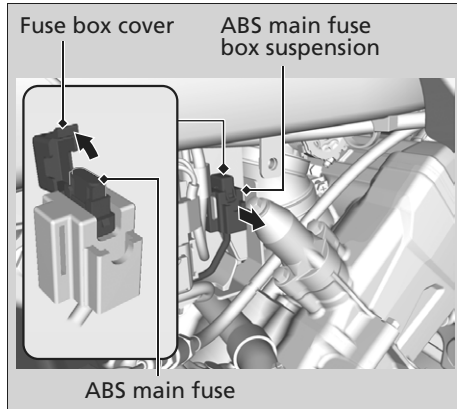

1. Remove the battery box cover. 2 P. 97
2. Pull the ABS main fuse box suspension out.
3. Open the fuse box cover.
4. Pull the ABS main fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
  - u Spare main fuse is provided in the starter magnetic switch.
5. Reinstall parts in the reverse order of removal.