





Switches *(Continued)*

CRF1000D

Torque Control switch

Torque Control level setting and Torque Control on/off.  **P.56**

Headlight dimmer/Passing light control switch

-  : High beam
-  : Low beam
-  **PASS** : Flashes the high beam headlight.


Shift up switch (+)

To shift up the gear.

 **P.68**

Horn button

Shift down switch (-)

To shift down the gear.  **P.68**

Turn signal switch

Pressing the switch turns the turn signal off.

N-D Switch

To shift between Neutral and AT MODE.  **P.66**

