

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. 2 P. 582 P. 59
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - u If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. 2 P. 58
- Make sure engine stop switch is in the (Run) position. 2 P. 49, 2 P. 51
- Check for a blown fuse. 2 P. 154
- Check for a loose battery connection or battery terminal corrosion. 2 P. 82, 2 P. 95
- Check the condition of the battery. 2 P. 151

If the problem continues, have your motorcycle inspected by your dealer.