

## Instruments *(Continued)*

### Function

Following items can be changed sequentially.

- User Modes (this page)
- -Trip  P.76
- Auto Cancel Turn Signal  P.77

### User Modes

You can change the [Power], [Engine Brake], [Overall], [Front], [Rear], [ABS], [Preload] values in [USER 1 MODE] and [USER 2 MODE].

