

Read this section carefully before you ride. It presents the location of the basic controls on your CRF.

Operation Component Locations .....	6
MIL (Malfunction Indicator Lamp) .....	7
MIL Blink Pattern .....	7
Current DTC/Freeze DTC .....	7
Circuit Inspection.....	8
DTC Index .....	9
Engine Mode & Launch Control System Indicator & Torque Control Indicator .....	10
Engine Mode Indicator .....	10
Launch Control System Indicator .....	10
Torque Control Indicator .....	10