


Fuel Pressure Relieving

1. Hang the fuel tank to the left side of the frame (page 35).
2. Disconnect the fuel pump connector (1).

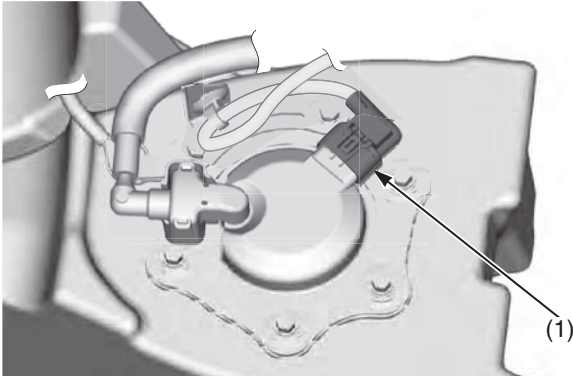


(1) fuel pump connector

3. Reposition the fuel tank and start the engine and let it idle until the engine stalls.

Fuel Line Replacement


Disconnection

1. Relieve the fuel pressure (this page).
2. Hang the fuel tank to the left side of the frame.
3. Remove the fuel quick connect fitting cover (1) from the fuel pump (2).
4. Check the fuel quick connect fitting (3) for dirt, and clean if necessary.

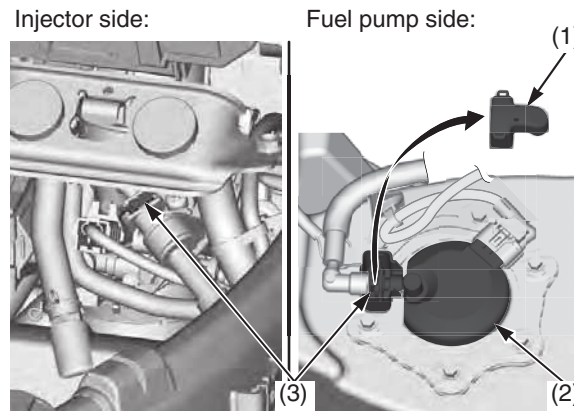


(1) fuel quick connect fitting cover
(2) fuel pump
(3) fuel quick connect fitting

5. Remove the bolt (4), clamp and setting rubber (5).

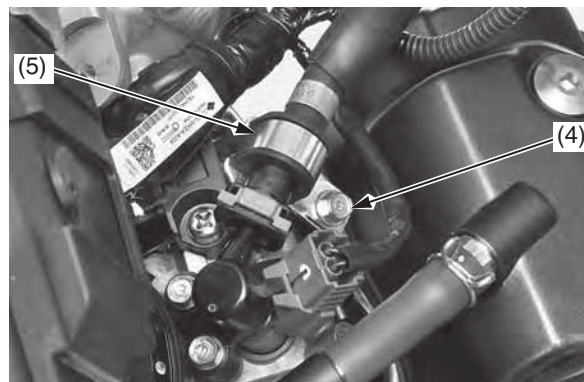

(4) bolt (5) clamp and setting rubber

6. Place a shop towel (6) over the fuel quick connect fitting.

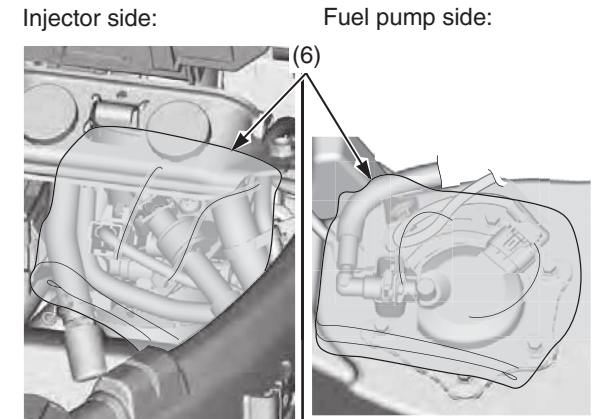

(6) shop towel

(cont'd)