

Driver Controls

Headlight Switch

The headlight switch is located on the front console, to the left of the steering wheel. This switch turns the headlights and tail lights on and off. It is also used to select high beam (\equiv D) or low beam (\equiv D) for the headlights.

To turn the lights on, rotate the switch away from you, stopping at the desired beam level. To change beam levels, rotate to the desired level. To turn the lights off, press in and rotate the switch toward you to the OFF position.

