


# Instruments

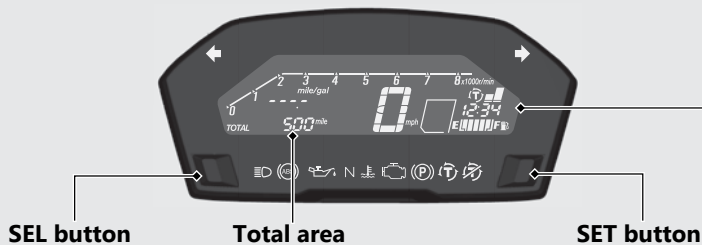

## Display Check

All the modes and digital segments will show when the ignition switch is turned to the ON position. If any part of these displays does not come on when it should, have your dealer check for problems.

### ▶ NC750X

If the opening/ending display is being set to SP, letters which have been set are displayed in the total area. To check the display in the total area, set the opening/ending display to STD.

### ➡ P.36