


## **ECO mode**

Depending on the fuel consumption, the tachometer segment color will change. If the fuel consumption is improved, the color of the tachometer will change to AQUA. Further, when the fuel consumption is improved, it will turn GREEN.


- ▶ The ECO mode color is not displayed at speeds below approximately 12 mph (20 km/h).
- ▶ When the gear position mode or engine rev mode in the base color mode is selected, the ECO mode color is not displayed even if the ECO mode is set to on.

**To set the ECO mode:**  **P.36**

## **Shift up mode**

When the number of engine revolution reaches shift-up point you have set, the color of the tachometer shows in AMBER this informs you of the indication to shift up. Default setting is "5,000 rpm".

- ▶ When the gear position mode or engine rev mode in the base color mode is selected, the shift-up mode color is not displayed even if the shift up mode is set to on.

**To set the shift up mode:**  **P.36**

**To set the shift up point:**  **P.36**