



# Shifting Gears

---

## UPSHIFTING SEQUENCE

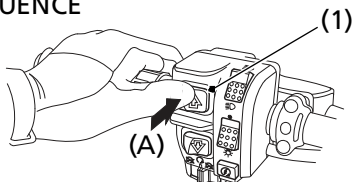

## DOWNSHIFTING SEQUENCE

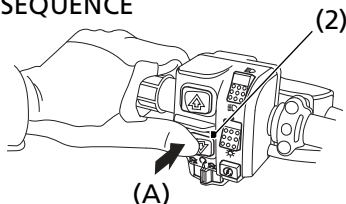

(1) upshift switch

(A) press

(2) downshift switch

Your ATV has five forward gears: 1, 2, 3, 4, and 5.

Two gearshift switches are located next to the left handlebar grip: upshift (⬆) and downshift (⬇).

To upshift the transmission, press the upshift switch (1) once.  
To downshift the transmission, press the downshift switch (2) once.

To select reverse, see *Riding in Reverse* page 81.

After starting the engine and letting it warm up, follow these procedures:

1. With the transmission in neutral, release the parking brake, but continue squeezing the rear brake lever/parking brake lever.
2. With the throttle closed, press the upshift switch once to shift into 1st (first) gear.