## If Your Engine Quits or Won't Start

| SYMPTOM: Starter motor doesn't operate. |                                 |
|---|---------------------------------|
| POSSIBLE CAUSE                          | WHAT TO DO                      |
| ignition switch OFF                     | Turn the ignition switch ON.    |
| engine stop switch OFF                  | Slide the engine stop switch to |
|   | RUN.                            |
| transmission not in                     | Shift into neutral.             |
| neutral                                 |                                 |
| blown fuse                              | Replace with a new fuse of the  |
|   | same rating (page 218).         |
| battery lead loose                      | Tighten the battery lead.       |
| low (or dead) battery                   | Charge the battery (page 187).  |
|   | If charging doesn't help, see   |
|   | your dealer.                    |
| faulty starter motor                    | If all possible causes are      |
|   | negative, the starter motor     |
|   | may be faulty. See your dealer. |

| SYMPTOM: Starter motor works, but the engine won't start. |                                      |
|---|--------------------------------------|
| POSSIBLE CAUSE  | WHAT TO DO                           |
| out of fuel   | Fill the fuel tank.                  |
| flooded engine  | See <i>Flooded Engine</i> (page 74). |
| loose or unconnected                                      | Install the spark plug cap           |
| spark plug cap  | securely. If the engine still        |
|   | won't start, see your dealer.        |
| loose battery cables                                      | Tighten the battery terminal         |
|   | bolts.                               |
| weak battery  | Charge the battery (page 187).       |
|   | If charging doesn't help, see        |
|   | your dealer.                         |