


# Indicators & Displays

---

The indicators and displays on your ATV keep you informed, alert you to possible problems, and make your riding safer and more enjoyable. Refer to the indicators frequently. Their functions are described on the following pages.

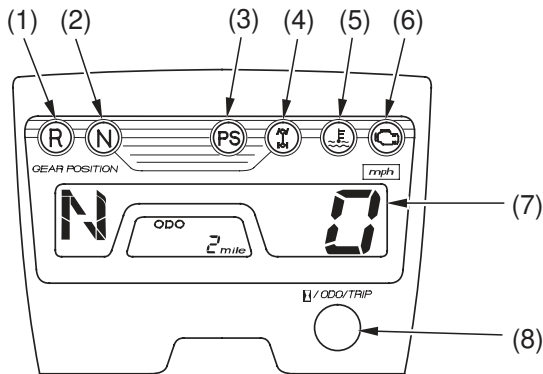

- |                                                             |                                                |
|-------------------------------------------------------------|------------------------------------------------|
| (1) reverse indicator                                       | (5) high coolant temperature indicator         |
| (2) neutral indicator                                       | (6) PGM-FI indicator                           |
| (3) PS (Electric Power Steering) indicator (TRX420FPE only) | (7) multi-function display                     |
| (4) 4WD indicator (Except TRX420TE)                         | (8) hourmeter/odometer/tripmeter select button |

## Lamp Check

The high coolant temperature indicator and PGM-FI indicator come on for a few seconds and then go off when you turn the ignition switch ON ( I ).

TRX420FPE only:

The PS (Electric Power Steering) indicator comes on when you turn the ignition switch ON ( I ) so you can check that it is working.

The indicator remains on until the engine is started.