## Is Your ATV Ready to Ride?

Cable Check the cable housings for wear. Check the

fittings for looseness. Replace or tighten as

needed.

Lights Make sure the headlight, brake light and

taillight are working properly.

If you are carrying cargo, also check the following:

Loading Limits Make sure you do not exceed the load limits

(page 48).

Cargo Check that all cargo is secure.

Check these items after you get on the ATV:

Throttle Check the freeplay and adjust if needed. Press

the throttle to make sure it moves smoothly without sticking, and snaps shut automatically when it is released, in all steering positions

(page 131).

Brakes Squeeze the front and rear brake levers and

step on the rear brake pedal to check that the controls operate normally. Check for proper freeplay (pages 147, 149). Make sure there is

no brake fluid leakage.

Reverse Assist Lever Check the freeplay and adjust if needed

(page 134). Make sure the lever operates

smoothly without sticking.