

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER	INITIAL	REGULAR		Refer to page
		COMES	MAINT.	MAINT. INTERVAL		
		FIRST	mi	600	1200	
		⇨	km	1000	2000	
	MONTH	1	6	12		
	NOTE	HOURS	20	100	200	
*	FUEL LINE			I		—
*	THROTTLE OPERATION				I	131
	AIR CLEANER	NOTE 1		C	C	125
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2		I	I	130
	SPARK PLUG			I	I	135
*	VALVE CLEARANCE			I	I	138
	ENGINE OIL			INITIAL= 100 mi (150 km), 20 operating hours or 1 month: R REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R		105
	ENGINE OIL FILTER					110
*	ENGINE IDLE SPEED			I	I	—
	RADIATOR COOLANT	NOTE 3		I	I	119
*	COOLING SYSTEM	NOTE 2		I	I	—

\* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 226).