

Controls & Features

Ignition Switch


The ignition switch (1) is used for starting and stopping the engine (page 60). Insert the key and turn it to the right for the ON (|) position.

TRX420FPM only:

The ignition switch is also used to reset the oil change indicator (page 20).

Key Position	Function
ON ()	Electrical circuits on.
OFF (○)	No electrical circuits function.

CENTER OF HANDLEBAR

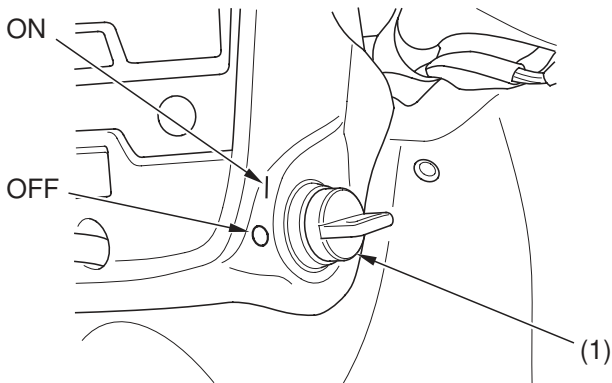

(1) ignition switch

| ON
○ OFF