

Spark Plug

Spark Plug Recommendation

standard spark plug	BKR5E-11 (NGK) or K16PR-U11 (DENSO)
---------------------	--

Use only the recommended type of spark plug in the recommended heat range.

NOTICE


Using spark plugs with an improper heat range can cause engine damage.

Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on [page 109](#).

1. Remove the seat ([page 120](#)) and tank cover assembly ([page 122](#)).
2. Clean any dirt from around the spark plug base.
3. Disconnect the spark plug cap (1). Take care to avoid damaging the spark plug wire when disconnecting the cap.
4. Using a spark plug wrench provided in the tool kit, remove the spark plug.

LEFT SIDE

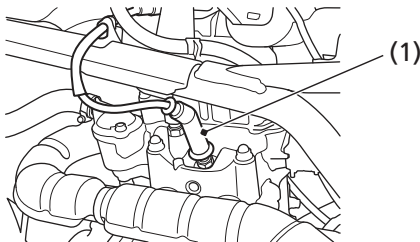

(1) spark plug cap

(cont'd)