

Maintenance Schedule

| ITEMS | FREQUENCY | WHICHEVER COMES FIRST ⇒ | INITIAL MAINT. | | REGULAR MAINT. INTERVAL | | Refer to page |
|-------|--------------------------------|----------------------------|----------------|-----|-------------------------|------|---------------|
| | | | mi | 100 | 600 | 1200 | |
| | | | km | 150 | 1000 | 2000 | |
| | | | MONTH | 1 | 6 | 12 | |
| NOTE | HOURS | 20 | 100 | 200 | | | |
| | DRIVETRAIN BOOTS | | | | I | I | 194 |
| | FRONT/REAR FINAL GEAR OIL | | | | (R: EVERY 2 YEARS) | I | 148, 151 |
| * | RANGE SELECT SYSTEM | | | | | I | — |
| * | BRAKE FLUID | NOTE 3 | | | I | I | 177 |
| * | BRAKE PADS WEAR | NOTE 1, 2 | | | | I | 181 |
| * | BRAKE LIGHT SWITCH | | | I | I | I | 185 |
| | BRAKE SYSTEM | | | I | I | I | 177 |
| | GUARDS | | | | I | I | 193 |
| * | SUSPENSION | | | | I | I | 174 |
| * | SPARK ARRESTER | | | | C | C | 173 |
| * | NUTS, BOLTS, FASTENERS | | | I | | I | — |
| ** | WHEELS/TIRES | | | I | I | I | 186 |
| ** | TIE-ROD AND JOINT BOOTS | | | I | I | I | — |
| ** | STEERING SHAFT HOLDER BEARINGS | | | | | I | — |
| ** | STEERING SYSTEM | | | | | I | — |

* Should be serviced by your dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official Honda Service Manual (page 258).

** In the interest of safety, we recommend these items be serviced only by your dealer.