


# Controls & Features

## Throttle Lever



The throttle controls engine rpm (speed). To increase engine rpm, press the throttle lever (1) with your thumb. To reduce engine rpm, release pressure on the throttle lever. The throttle will automatically return to the closed position (engine idle) when you remove your thumb.

### RIGHT HANDLEBAR

OPEN

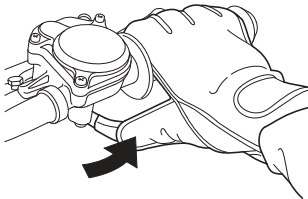

CLOSE

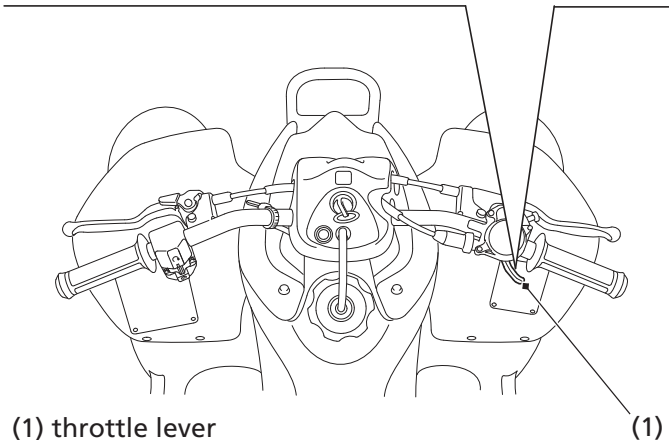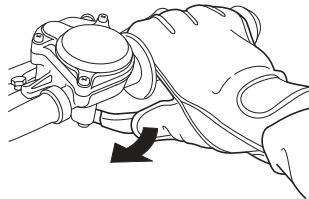

(1) throttle lever

(1)