


Safe Riding Precautions

Air Intake Restrictor Removal

1. Remove the seat ([page 95](#)).
 2. Unlatch the four retainer clips (5).
 3. Remove the air cleaner housing cover (6).
 4. Remove the air intake restrictor (7).
- Reinstall in the reverse order of removal.

UNDER SEAT

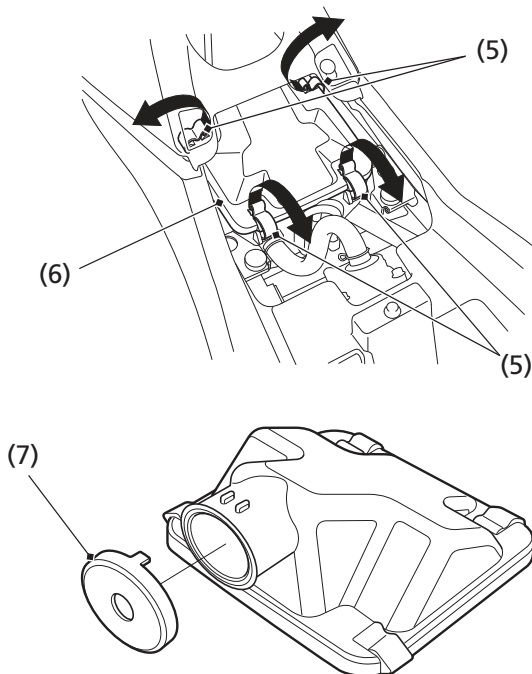

(5) retainer clips
(6) air cleaner housing cover

(7) air intake restrictor