


Maintenance Component Locations

rear brake lever/parking brake lever

front brake lever

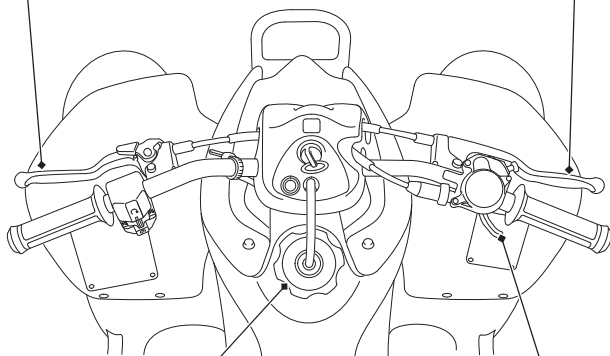

fuel fill cap

throttle lever