

Storing Your Honda

9. Inflate the tires to their recommended pressures ([page 128](#)).
10. Store your ATV in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
11. Place your ATV on blocks to lift all tires off the floor.
12. Cover your ATV with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

Removal from Storage

Refer to *Safety Precautions* on [page 84](#).

1. Uncover and clean your ATV.
2. If your ATV has been stored for more than four months – change the engine oil ([page 103](#)).
3. If your ATV has been stored for more than two months – ask your dealer to drain and replace the fuel.
4. Charge the battery ([page 146](#)) as required. Install the battery.
5. Lubricate the drive chain ([page 140](#)).
6. Perform a pre-ride inspection ([page 36](#)), then test-ride your ATV at low speeds.